

# IB-ACH-01 (Amplifier Box)

Designed to interface with the ACH-01

Cost

10X Amplification

Impedance Buffered

BNC Output Connector

The **IB-ACH-01 Amplifier Box** is a low cost interface amplifier developed by MEAS. The IB-ACH-01 is designed to mate directly to the connector supplied with the ACH-01-03 assembly. An adapter is required to interface the two components for use with either the ACH-01-02 or the ACH-01-04.




## FEATURES

- Gain 10X
- Low Frequency Filter -3dB @ 2kHz Fixed
- High Frequency Filter +3dB @ 30kHz Fixed
- Power Supply – One 9-Volt Battery
- Input Interface – FET for IB-ACH-01
- Supply Current 4.0 mA
- Battery Life 80 Hours
- Low Battery Cutoff 7.2V
- Output Impedance 100 Ohm
- Output Connector BNC

## APPLICATIONS

- Signal Amplification Box for ACH-01 Series Accelerometer

## dimensions

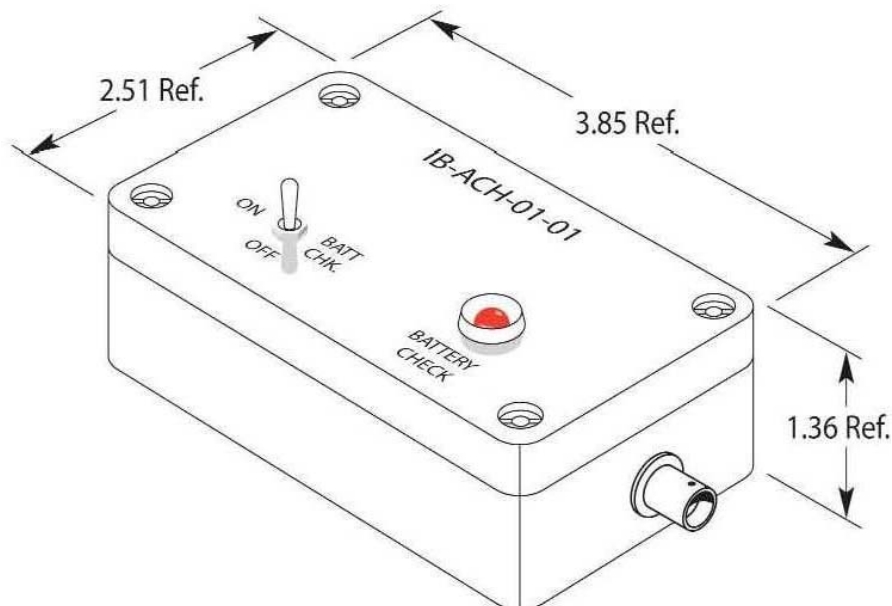

# IB-ACH-01 (Amplifier Box)

## specifications

Frequency Response:	
<u>Amplitude:</u>	Fixed 10 x Gain (90 mv/g Typical w/ ACH-01) ± 3% from 2 Hz to 30 kHz
<u>Phase:</u>	<+1.5% @ 10Hz <-5.0% @ 20kHz
<u>Inherent Noise:</u>	(2Hz to 30kHz): <2mV <sub>pk-pk</sub>
Output Impedance:	AC Coupled – 1 μF
Current Draw:	(w/o Battery Check LED)
<u>Typical:</u>	4.0 ma
<u>Maximum:</u>	7.6 ma
Cut-off Voltage:	@ 7.2V
Battery Life:	(w/o Battery Check LED): 80 hrs Typical (alkaline)
Rise Time:	13V/μs Typical
Maximum Output:	9V <sub>pk-pk</sub>

## battery installation

To replace or install battery, remove the housing cover by loosening the four screws on the box. Lift the lid *slowly*. Be sure not to tear the wires between the lid and the main housing. Replace the battery and reattach the lid by tightening the screws. The IB-ACH-01 is NOT shipped with a battery.

## operation

Prior to operation check the *Battery Low* indicator LED by pushing the switch to the Battery Check (Batt. Chk.) position. If the LED does not light replace the battery. The switch must be in the ON position for the amplifier box to function.

After checking the battery check the connection between the ACH-01 and the amplifier for correct orientation (see Figure 1 and the ACH-01 specification sheet). Depending on the ACH-01 configuration it may be necessary to use the supplied female-to-female cable for connection to the IB-ACH-01 amplifier.

## ordering information

Description	Part Number
IB-ACH-01	1003058

### 联系方式



深圳市亿为测控电子有限公司  
Shenzhen Bill-Well Measurement & Control Electronics Co., Ltd.

广东省深圳市南山区创业路怡海广场东座2407 邮编：518000

电话：+86 755 2641 9890 传真：+86 755 2641 9680

电子邮箱：sales@bill-well.com